

INSTALLATION INSTRUCTIONS E-CONOLIGHT E-HL SERIES

Document:	CI308X40R4	Date	2015/7/01
Created By:	TMT	DCR#	2015-223



! CAUTIONS

IMPORTANT SAFEGUARDS


When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. **DANGER**- Risk of shock- Disconnect power before installation.
DANGER – *Risque de choc – Couper l'alimentation avant l'installation.*
2. This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
Ce produit doit être installé conformément à NEC ou votre code électrique local. Si vous n'êtes pas familier avec ces codes et ces exigences, veuillez contacter un électricien qualifié.
3. Suitable for mounting within 1.2 m (4 ft) of the ground.
Peut être installé à moins de 1,2 m (4 pi) du sol.
4. For supply wire temperature rating, refer to fixture label.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE


INSTALLATION INSTRUCTIONS Premium LED Floodlight – Small

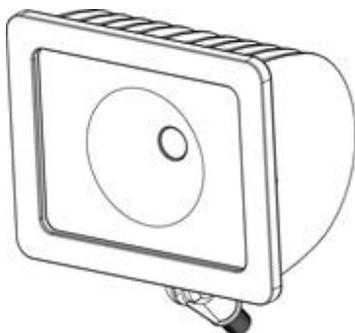

1. Do not wire fixture until fixture is mounted.
2. This fixture can be mounted to any metal ½" NPSM (pipe size) threaded mounting (supplied by others).
3. Route fixture leads through the mounting hole.
4. Thread mounting onto end of fitter on fixture and secure with locknut. Using a sealing compound on the threads will ensure a watertight seal.

5. Complete the electrical connections (see "Fixture Wiring" below).
6. **TO AIM FIXTURE:** Loosen the fitter locking screw.
7. Adjust to the position desired.
8. Hold the arm in place ensuring that the interlocking teeth are aligned and tighten fitter locking screw.

E-HL INSTALLATION INSTRUCTIONS Premium LED Floodlight - Large

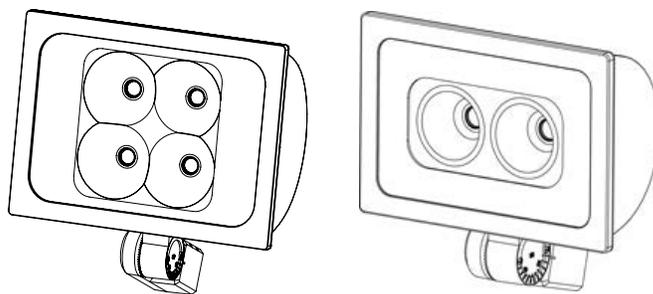

1. Remove splice compartment cover from fitter.
2. Route supply leads through fitter and into splice compartment.
3. Slip lower fitter over pipe or tenon and securely tighten both set screws with 5/32 allen wrench to 140 in. lbs.
4. Complete the wiring to the power source and ground (refer to fixture wiring below) inside splice compartment.
5. **TO AIM FIXTURE:** With splice compartment cover removed, loosen fitter bolt.
6. Adjust fixture to desired angle.
7. Retighten fitter bolt ensuring that the upper and lower fitters are engaged. Tighten fitter bolt to 230 in. lbs. with a torque wrench.
8. Replace splice compartment cover.

FIXTURE WIRING

1. Using customer supplied 90°C minimum rated wire connectors, make the following electrical connections:
 - a. Connect the black fixture lead to the voltage supply lead
 - b. Connect the white fixture lead to the neutral supply lead
 - c. Connect the green or green/yellow ground lead to the supply ground lead.