


INSTALLATION INSTRUCTIONS

E-GL3L Series

Document:	CJ308X45R1	Date	2017-04-18
Created By:	TMT	ECO#	007452

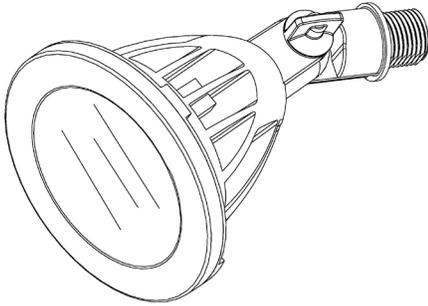

CAUTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- DANGER**- Risk of shock- Disconnect power before installation.
DANGER – Risque de choc – Couper l'alimentation avant l'installation.
- This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
Ce produit doit être installé conformément à NEC ou votre code électrique local. Si vous n'êtes pas familier avec ces codes et ces exigences, veuillez contacter un électricien qualifié.
- For supply wire temperature rating, refer to fixture label.
- Only use in 120 – 277 Volt applications.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

INSTALLATION

- Thread the floodlight mounting arm into the 1/2" opening of the cover and secure it with 1/2" locknut. Using a sealing compound on the threads will ensure a water tight seal.

FIXTURE WIRING

Fixture is equipped with universal volt driver 120-277V (ie. 120V, 208V, 240V or 277V)

PHASE TO NEUTRAL WIRING 120/277V

- Connect supply ground to fixture ground (green) lead.
- Connect supply common to fixture neutral (white) lead.
- Connect supply Vin to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

PHASE TO PHASE WIRING 208/240V

- Connect supply ground to fixture ground (green) lead.
- Connect supply L1 (Hot) to fixture neutral (white) lead.
- Connect supply L2 (Hot) to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

TO AIM FIXTURE

- Loosen the side bolt connected to the arm knuckle to aim the fixture up or down. Re-tighten bolt to secure the fixture in the desired position.