

INSTALLATION INSTRUCTIONS CORNER COVER

Document	CI153X02R0	Date	05/20/10
Drawing/Page	JAD	DCR#	10-162



CAUTIONS

1. To avoid the possibility of electrical shock, turn off power supply before installation or servicing.

NOTES

1. Use this template to align track for 90° turns. See **Figure 1** for proper fit of cable to corner.
2. Cable must extend 1-3/4" (45 mm) beyond end of track before making 90° turn. This will assure proper fit of Corner Cover.
3. Track must be mounted no less than 1/8" (3mm) from wall for proper fit of Corner Cover or End Cover.

INSTALLATION

1. Cut along dotted line and place template in corner.
2. Align track in positions noted so that track ends are exactly 2-5/8" (67 mm) from corner. Track must be mounted no less than 1/8" (3 mm) from wall for proper fit of Corner Cover or End Cover.
3. Secure track with screws.
4. Place cable in one track section.
5. Make a 90° turn with cable, bending the cable slightly on its side, making sure that the bend in the cable is 1-3/4" (45mm) beyond the end of the track. See **Figure 1**.
6. Place cable in next track section.
7. Snap Corner Cover over two track sections. See **Figure 1**.
8. Snap End Cover at end of track. See **Figure 2**.

Figure 1
Proper fit of cable to corner


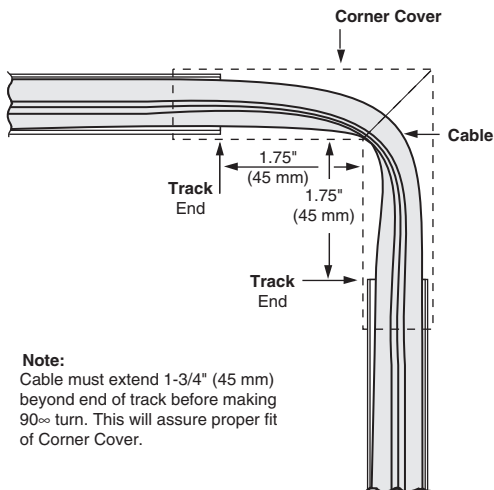


Figure 2
Placement of ceiling hole



INSTALLATION INSTRUCTIONS CORNER COVER

Document	CI153X02R0	Date	05/20/10
Drawing/Page	JAD	DCR#	10-162

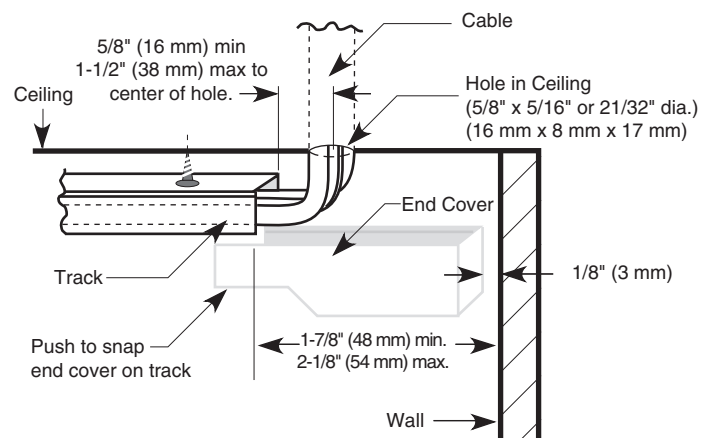