


INSTALLATION INSTRUCTIONS E-CC SERIES

Document: CI308X41R4

Date: 2015-03-09

Created by: TMT

DCR#: 15-084

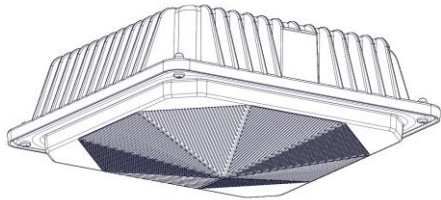

CAUTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. **DANGER**- Risk of shock- Disconnect power before installation.
Danger – Risque de choc – Couper l'alimentation avant l'installation.
2. This product must be wired in accordance with the National Electrical Code and applicable local codes and ordinances. Proper grounding is required to ensure personal safety. A qualified electrician should do all work.
Ce produit doit être installé conformément à NEC ou votre code électrique local. Si vous n'êtes pas familier avec ces codes et ces exigences, veuillez contacter un électricien qualifié.
3. Make certain power is OFF before starting installation or attempting any maintenance.
4. For covered ceilings only.
Installation sur plafond couvert seulement.
5. Do not recess the fixture.
6. For supply wire temperature rating, refer to fixture label.

SAVE THESE INSTRUCTIONS

**IMPORTANT - DO NOT TOUCH THE
YELLOW PORTION OF THE LED
ARRAY. DAMAGE MAY OCCUR.**

MOUNTING USING 3/4" PLUG IN THE BACK

1. Remove the four screws attaching the lens diffuser to the fixture and set the screws and lens aside.
2. Remove the screws attaching the housing cover to the housing and set aside.

3. Remove 3/4" plug from back for wiring access.
4. Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes do not drill within 1/4" (6mm) from edges of fixture. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.
Note: Fixture can also be pendant mounted by threading the customer supplied pendant through the 3/4" mounting hole on the top of the fixture. If using center conduit hole for pendant the wireway **MUST** be filled with a high grade of silicone supplied by customer.
5. Route the incoming power and ground leads through the hole located in the center of the back of the fixture and through the opening on the side of the LED Array mounting post.
6. Complete the wiring to the incoming power and ground (refer to "Fixture Wiring" section).
7. Replace the housing cover and lens diffuser. Note: Make sure no wires are pinched when replacing parts.

MOUNTING USING 1/2" PLUGS ON THE SIDE

1. Remove the four screws attaching the lens diffuser to the fixture and set the screws and lens aside.
2. Remove the screws attaching the housing cover to the housing and set aside.
3. Remove 1/2" plug from direction you intend to feed conduit.
4. Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes do not drill within 1/4" (6 mm) from edges of fixture. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.
5. Complete the wiring to the incoming power and ground (refer to "Fixture Wiring" section).
6. Replace the housing cover and lens diffuser. Note: Make sure no wires are pinched when replacing parts.

FIXTURE WIRING

1. Make the following electrical connections in the mounting box or junction box.
 - a. Connect the black fixture lead to the voltage supply lead
 - b. Connect the white fixture lead to the neutral supply lead
 - c. Connect the green or green/yellow ground lead to the supply ground lead.