


INSTALLATION INSTRUCTIONS

E-WFT05 Series

Document:	LPN00462X0001A0_A	Date	2017-2-07
Created By:	TMT	ECO#	007033

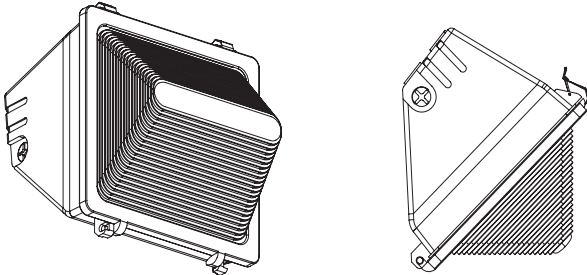

CAUTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1. DANGER**- Risk of shock- Disconnect power before installation.
DANGER – *Risque de choc – Couper l'alimentation avant l'installation.*
- This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
Ce produit doit être installé conformément à NEC ou votre code électrique local. Si vous n'êtes pas familier avec ces codes et ces exigences, veuillez contacter un électricien qualifié.
- Suitable for wet locations.
Convient aux emplacements mouilles.
- Wall mount only.
Installation murale seulement.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

MOUNTING

NOTE: To insure proper installation and service, the fixture should be mounted with the lens angled toward the ground. Do not recess. Also make sure fixture is weatherproof by sealing all gaps and holes with weatherproof silicone sealant.

- Open the lens by releasing clips on the top edge of the housing.
- Remove the reflector by removing the two reflector retaining screws.
NOTE: Do NOT touch LED array during installation.
- Locate and remove desired conduit plug on the back or sides of fixture housing.

- Pull the supply leads through the conduit opening and mount the fixture to the wall by drilling through the housing approximately 1" (25mm) diagonally from each corner at the back of the fixture and securing it to the mounting surface. (Mounting hardware provided by customer)
- All unused holes must be plugged. Apply waterproof silicone to all mounting holes to ensure a tight seal.
- Complete the wiring to the power source and ground (refer to wiring instructions).
- Replace the reflector removed in Step 2. Be careful to not pinch any wires.
- Close lens and fasten retention clips.

ELECTRICAL CONNECTIONS

Fixture is equipped with universal volt driver 120-277V (ie. 120V, 208V, 240V or 277V)

PHASE TO NEUTRAL WIRING 120/277V

1. Connect supply ground to fixture ground (green) lead.
2. Connect supply common to fixture neutral (white) lead.
3. Connect supply Vin to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

PHASE TO PHASE WIRING 208/240V

1. Connect supply ground to fixture ground (green) lead.
2. Connect supply L1 (Hot) to fixture neutral (white) lead.
3. Connect supply L2 (Hot) to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

FCC NOTICE Class B

CAUTION: Changes or modifications not expressly approved could void your authority to use this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved could void your authority to use this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-005 (B)/NMB-005 (B)