


INSTALLATION INSTRUCTIONS E-ARB Post Top LED

Document:	LPN00521X0001A0	Date	2017-8-29
Created By:	TMT	ECO#	008173

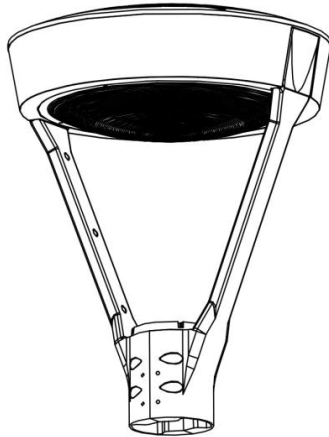

INSTALLATION

NOTE: Fixture is intended to be mounted on a 2-3/8" O.D. heavy duty pipe or tenon.

1. Remove cover on fixture hub by removing (4) screws on the cover.
2. Feed power supply leads through top of 2 3/8" pipe or tenon and through fixture hub into top wiring chamber or fixture.
3. Tie knot in supply leads in wiring chamber to act as a strain relief. The knot will support the full weight of the power supply cord running down the pole, and thus will relieve any pressure on the connections made inside the hub.
4. Slip fixture hub over pipe or tenon. Be careful not to pinch any wires in the process.
5. Using 1/8" Allen wrench, snug up all (8) set screws against tenon. **DO NOT FULLY TIGHTEN UNTIL ALL (8) SCREWS ARE SNUG AGAINST TENON. See Figure 1.**
6. Torque screws in a crossing pattern around tenon to 72 in-lbs (6 ft-lbs).
7. Make wiring connections as indicated in **Fixture Wiring** section on the back page.
8. Replace cover on hub.

CAUTIONS

IMPORTANT SAFEGUARDS


When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. **DANGER-** Risk of shock- Disconnect power before installation.
DANGER – Risque de choc – Couper l'alimentation avant l'installation.
2. This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
Ce produit doit être installé conformément à NEC ou votre code électrique local. Si vous n'êtes pas familier avec ces codes et ces exigences, veuillez contacter un électricien qualifié..
3. SUITABLE FOR WET LOCATIONS.
CONVIENT AUX EMPLACEMENTS MOUILLES.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

FIGURE 1

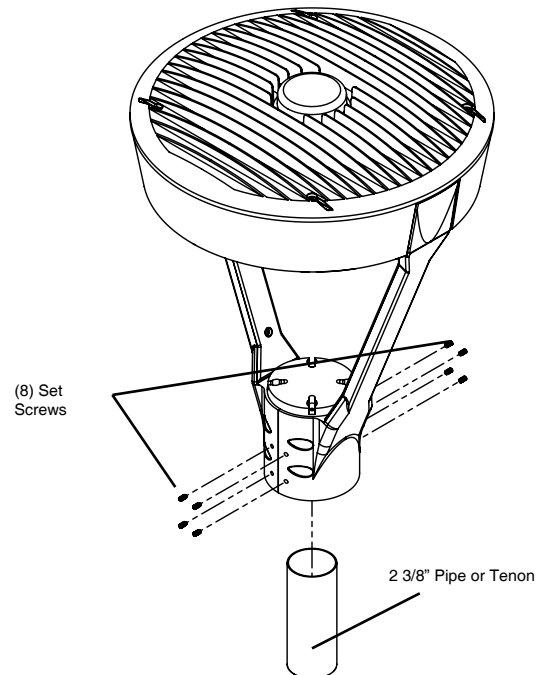

INSTALLATION INSTRUCTIONS E-ARB Post Top LED

Document:	LPN00521X0001A0	Date	2017-8-29
Created By:	TMT	ECO#	008173

FIXTURE WIRING

Fixture is equipped with universal volt driver 120-277V
(ie. 120V, 208V, 240V or 277V)

PHASE TO NEUTRAL WIRING 120/277V

1. Connect supply ground to fixture ground (green) lead.
2. Connect supply common to fixture neutral (white) lead.
3. Connect supply Vin to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

PHASE TO PHASE WIRING 208/240V

1. Connect supply ground to fixture ground (green) lead.
2. Connect supply L1 (Hot) to fixture neutral (white) lead.
3. Connect supply L2 (Hot) to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

FCC NOTICE Class A

CAUTION: Changes or modifications not expressly approved could void your authority to use this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
CAN ICES-005 (A)/NMB-005 (A)