


# INSTALLATION INSTRUCTIONS

## HTB Series

Document:	LPN00367X0001A0_A	Date	2017-2-24
Created By:	TMT	ECO#	007192

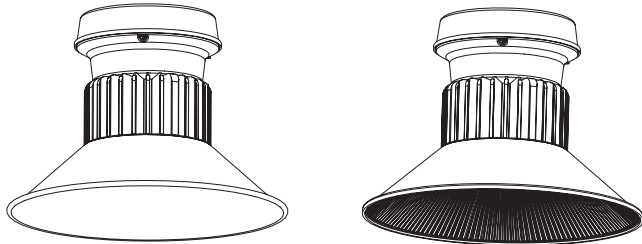


2. Remove the driver compartment cover by removing (3) Phillips head screws. See **Figure 1**
3. Insert cord through the hole in the center of the hook on top of the cover. Pull approximately 12" (305 mm) of cord through the hole and tie a single knot in the cord to act as a strain relief. The knot should be approximately 2" (51 mm) from the end of the cord insulation (not the individual wire insulation).
4. Make wiring connections per Electrical Connections section.
5. Replace driver compartment cover that was removed in Step 2 by tightening (3) Phillips head screws. Ensure that the gasket is properly positioned before tightening screws.
6. Push inward on spring clip on hook until top of clip is free from fixture hook.
7. Slide hook into securely mounted eye hanger (supplied by others) and return spring clip to its original closed position
8. Insert plug into matching receptacle and turn power on.

### PENDANT MOUNTING

1. Once the basic unit is assembled, remove the driver compartment cover by removing (3) Phillips head screws. See **Figure 1**
2. Securely attach top cover to 1/2" threaded pendant by threading pendant into cover. See **Figure 1**
3. Route supply leads through pendant and cover.
4. Make wiring connections per the **Electrical Connections** section on the back page.
5. Replace driver compartment cover that was removed in Step 1 by tightening (3) Phillips head screws. Ensure that the gasket is properly positioned before tightening screws.
6. Turn power on.

FIGURE 1

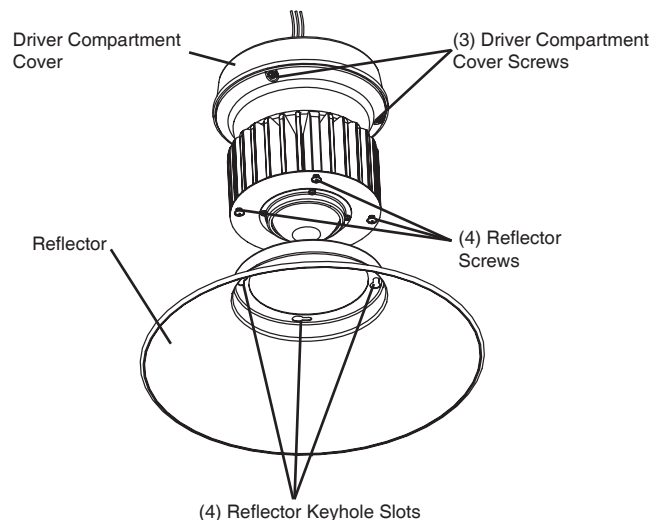

### CAUTIONS

#### IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

#### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. **DANGER**- Risk of shock- Disconnect power before installation.  
**DANGER** – Risque de choc – Couper l'alimentation avant l'installation.
2. This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.  
*Ce produit doit être installé conformément à NEC ou votre code électrique local. Si vous n'êtes pas familier avec ces codes et ces exigences, veuillez contacter un électricien qualifié.*
3. Suitable for damp locations.  
*Convient aux emplacements humides.*

#### SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

#### BASIC UNIT ASSEMBLY - PRISMATIC OR ALUMINUM REFLECTOR

1. Loosen (4) Phillips head screws on reflector support plate at base of extrusion. Do not remove screws. See **Figure 1**.
2. Align keyhole slots in reflector with (4) loosened screws. Pass screw heads through keyholes and rotate reflector clockwise to engage screws in slots.
3. Tighten screws.

#### HOOK, CORD, AND PLUG OPTION

1. Once the basic unit is assembled, thread the hook into the threaded opening on the driver compartment cover and tighten the hook.

# INSTALLATION INSTRUCTIONS

## HTB Series

Document:	LPN00367X0001A0_A	Date	2017-2-24
Created By:	TMT	ECO#	007192

### ELECTRICAL CONNECTIONS

Fixture is equipped with universal volt driver 120-277V  
(ie. 120V, 208V, 240V or 277V)

#### PHASE TO NEUTRAL WIRING 120/277V

1. Connect supply ground to fixture ground (green) lead.
2. Connect supply common to fixture neutral (white) lead.
3. Connect supply Vin to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

#### PHASE TO PHASE WIRING 208/240V

1. Connect supply ground to fixture ground (green) lead.
2. Connect supply L1 (Hot) to fixture neutral (white) lead.
3. Connect supply L2 (Hot) to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

### FCC NOTICE

**CAUTION:** Changes or modifications not expressly approved could void your authority to use this equipment.

This device complies with Part 15 of the FCC Rules. Operation to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the device is operated in a commercial environment. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### INDUSTRY CANADA STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. In addition, this device complies with ICES-003 of the Industry Canada (IC) Regulations.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.